



WHISTLER

Whistler GT438XI: Setari recomandate



Banda X OFF

Banda K ON

Banda Ka OFF

Test OFF

Laser LSID ON

VG2 OFF

Voice ON/OFF

VG2 OFF

POP OFF

Batery Saver BSRV OFF

Alert led BLNK ON/OFF