



# WHISTLER

## Whistler GT468GXl: Setari recomandate



<b>Banda X</b>	OFF
<b>Banda K</b>	ON
<b>Banda Ka</b>	OFF
<b>Test</b>	OFF
<b>Laser LSID</b>	ON
<b>VG2</b>	OFF
<b>Voice</b>	ON/OFF
<b>VG2</b>	OFF
<b>POP</b>	OFF
<b>Batery Saver BSRV</b>	OFF
<b>Alert led BLNK</b>	ON/OFF
<b>TFSR</b>	ON
<b>FDSR</b>	OFF
<b>GPS Y</b>	ON
<b>GMT</b>	3
<b>Clock Y</b>	ON/OFF
<b>Auto Dimmer</b>	ON
<b>Busola/Compass</b>	ON/OFF
<b>AutoQuiet Speed AQSPD 0</b>	40
<b>Speed mute SPD-M 0</b>	40
<b>Alarm radius</b>	rad 800
<b>Delete waypoints</b>	D+Q reset